


TS100 簡易操作指南

Horizontal Installation

角度支架朝上安裝
Angle stand install upward

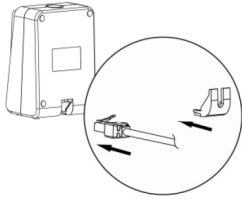


水平放置
Place scanner horizontally



Pitch Forward Installation

角度支架朝下安裝
Angle stand install downward

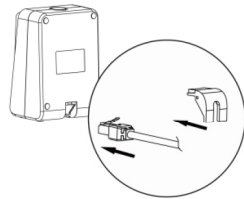

前傾 15 度放置
Pitch forward 15deg



Basic Setting



恢復原廠設定
Factory Defaults

Retail Symbology



開零售條碼
Only Enable Retail Barcode

- ☆ 用於零售條碼應用，有助於優化掃描效率。
- 開啟條碼種類：UPC, EAN, Code128, QR, PDF417.
- ☆ Make for optimize scan performance in most retail barcode scan use case.
- Symbology: UPC, EAN, Code128, QR, PDF417.

Scan Mode Switching




按鍵切換
Button Switch
(Default)



自動切換
Auto Switch


Scan Mode Switching

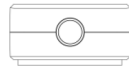

掃描器上方按鍵可快速切換以下掃描模式，藍黃色燈表示現在模式。用戶可為掃描器設定兩種掃描模式，如下“掃描模式組合”。設定為“按鍵切換”時，在黃燈模式下，按一下可切換回藍燈模式。設定為“自動切換”時，在黃燈模式下，掃描成功或超過30秒後，掃描器會自動返回藍燈模式。

一般掃描	支援掃描各種印刷條碼，手機螢幕條碼、小尺寸條碼。
一維條碼掃描	支援大量在紙張或手機螢幕的快速掃描一維條碼。
關閉掃描	掃描器沒作用。
螢幕掃描	可用於掃描低亮度手機螢幕條碼，高反光物體表面的條碼，設定方法見“操作手冊”。

Scan Mode Switching

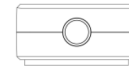

Press button to quick switch below scan mode, the top color led indicate current scan mode. User can set 2 scan mode to scanner, see "Scan Mode Group".
If setting scan mode "Button Switch", user can press top button to switch over from yellow scan mode to blue scan mode.
If setting scan mode "Auto Switch", in yellow scan mode, after decoding success or 30 seconds timeout, the scanner will auto switch to blue scan mode.

Normal Scan	Support scanning print barcode, cellphone screen barcode, small size barcode.
1D Fast Scan	Support fast scanning 1D print barcode, 1D cellphone screen barcode continuously.
Disable Scan	Scanner stop working.
Screen Scan	Support scanning low light screen barcode, mirror like surface barcode, see setting in "User Guide".

Scan Mode Group 1

Scan Mode
Led



一般掃描 Normal Scan



一維碼快掃 1D Fast Scan

Scan Mode Group 2

Status Led



關閉掃描 Disable Scan



一般掃描 Normal Scan

Scan Mode Group 3

Status Led



關閉掃描 Disable Scan



一維碼快掃 1D Fast Scan

Add Suffix



Add CR + LF Suffix



Add CR Suffix

Add Suffix



Add LF Suffix



Add TAB Suffix